

Crepe Machine User Manual

Warning: Use the machine under the instructions, accidents of any one who violating it will not be responsible.

The Crepe Machine is improved from the same type of new product both in and abroad, it is small, light, easy and even heating, smart, reasonable formation and easy operated. The body is made of stainless steel, and there is a drawer at the base for heat preservation.

A. Specifications:

model	power	output	frequency	Size (mm)
CP4006	220V~	3000W	50Hz	450×500×230


B. Condition:

The temperature around it should not be over 50°C.

C. Installation and operation:

1. All the connection and installation should be done by qualified electricians.
2. The pressure should be the same as the machine's (about 220V \pm 10%).
3. Don't put it near the flammable to avoid fire.
4. Connect the power and set the temperature to what you want, when it reaches the temperature, it is ready for use.

D. Electrical theory:

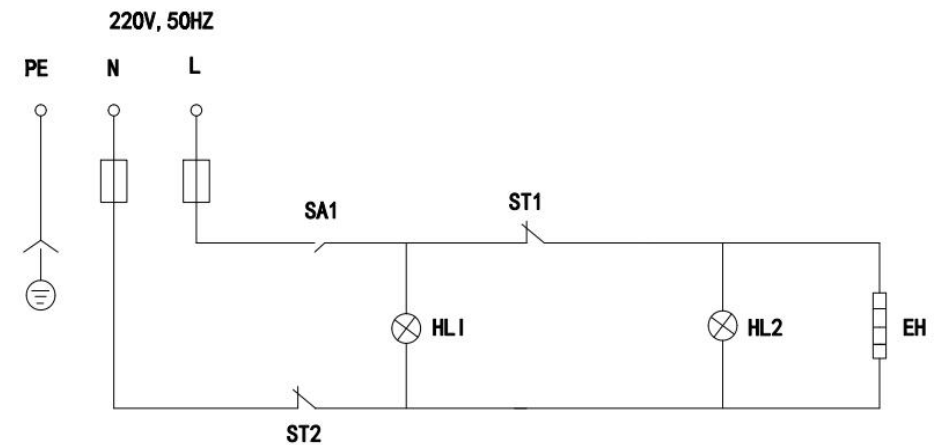

E. Transportation and storage:

When being transported, be careful not to shake the machine

violently or crash it with anything else. Don't put it outdoors or in the direct sunlight. If so, avoid rainfall and store it in ventilated places out of erosive gases. Don't put it up-side-down.

F. Cleaning and protection:

- 1. Cut off the power before cleaning.**
- 2. Use non-erosive detergency to clean the outer part of the machine, every day after using. Don't use running water to wash it directly, it will do harm to the electrical function.**

Warning: Don't spray water to the temperature controller.